


PHOENIX FIREBOARD INSTALLATION GUIDE

STEP 1:

IDENTIFY THE CHAMFERED EDGES ON THE FIREBOARD. THE CHAMFERED EDGES ALWAYS SIT FACING THE OUTSIDE OF THE STOVE, ALLOWING THE BOARD TO SIT OVER WELDS.

ONCE IDENTIFIED, BEGIN BY INSERTING ONE OF THE SIDE BOARDS, SLIDING IT IN TO PLACE LEADING WITH THE TOP OF THE BOARD FIRST AS PICTURED.

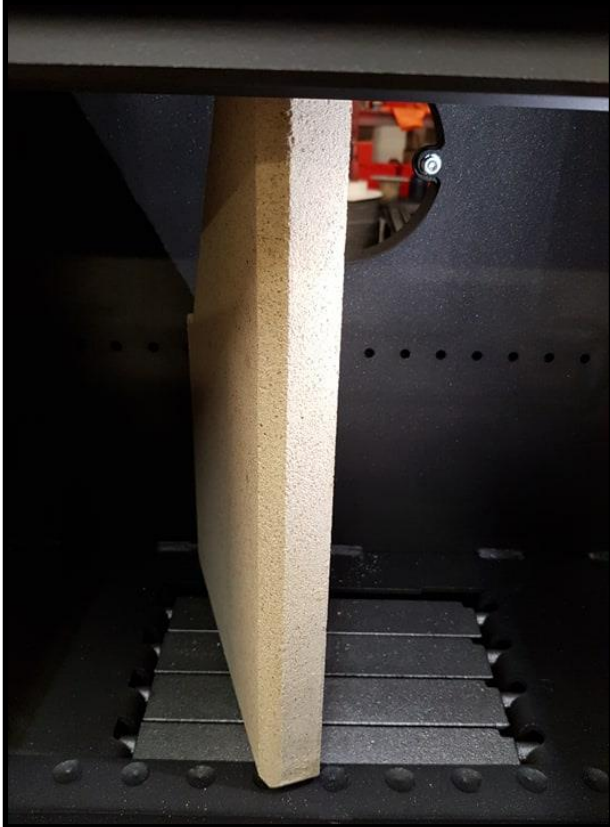

ONCE THE BOARD IS IN PLACE, ENSURE IT IS FLUSH AND TIGHT WITH THE SIDE OF THE STOVE, AND PULL IT FORWARD AS FAR AS POSSIBLE, AS PICTURED. THIS WILL LEAVE A SMALL GAP BETWEEN THE BOARD AND THE REAR OF THE STOVE AND ALLOW EASIER FITMENT OF THE BAFFLE AND REAR BOARD.



PHOENIX FIREBOARD INSTALLATION GUIDE

STEP 2:

INSERT THE BAFFLE WITH THE METAL STRIP FACING TOWARDS YOU, ONE END AT A TIME. TO ALLOW FOR EASIER FITMENT, DIRECT THE LEADING END OF THE BAFFLE INTO THE SIDE OF THE STOVE THAT IS FREE OF FIREBOARD FIRST, AND LEAN THE FRONT OF THE BAFFLE TOWARDS YOU AS PICTURED. THIS WILL GIVE YOU SOME EXTRA SPACE TO GET THE BAFFLE THROUGH THE DOOR APERTURE.



ONCE IN PLACE, YOU WILL NEED TO LIFT THE BAFFLE WITH ONE HAND AS PICTURED BELOW, AND PLACE THE SECOND SIDE BOARD IN BENEATH IT . THIS WILL HELP HOLD THE BAFFLE IN PLACE WHILE YOU MANOEUVRE THE SECOND SIDE BOARD INTO POSITION, USING THE SAME TECHNIQUE SHOWN PREVIOUSLY IN STEP FOUR.



PHOENIX FIREBOARD INSTALLATION GUIDE

STEP 3:

WITH BOTH SIDE BOARDS AND THE BAFFLE IN THE STOVE, CHECK THE SEATING OF THE BOARDS BY ENSURING THEY ARE PROPERLY ALIGNED. THE BAFFLE SHOULD REST ON TOP OF BOTH SIDE BOARDS, WITH EACH BOARD SITTING IN THE ALLOTTED PRE-CUT CHANNELS AS PICTURED.



STEP 4:

THE REAR BOARD IS THE FINAL PIECE TO GO IN THE STOVE, AND IT COMES IN TWO HALVES. THE CHAMFERED EDGE OF EACH BOARD SITS AT THE BOTTOM OF THE STOVE (FACING THE REAR), WITH THE PREDRILLED HOLES AT THE TOP. THE LEFT AND RIGHT HAND SIDE OF THE REAR BOARD CAN BE DETERMINED BY PLACING BOTH HALVES TOGETHER, AND CREATING A CENTRE HOLE THAT HAS BEEN CUT THROUGH THE MIDDLE, AS SHOWN BELOW.



PHOENIX FIREBOARD INSTALLATION GUIDE

FINAL STEPS:

WITH ALL OF THE FIREBOARDS INSTALLED, THE INTERNAL SET UP OF THE STOVE CAN BE COMPLETED BY ADDING THE LOG GUARD CLIPS AND BARS, ALONG WITH TWO 'CHEEKS'. EACH OF THE LOG GUARD CLIPS ARE SEATED WITHIN THREE CUT OUTS IN THE FRONT OF THE STOVE, LOCATED JUST BEHIND THE DOOR APERTURE. ONCE IN POSITION THE LOG GUARD BARS CAN BE PUT IN PLACE, AND IF REQUIRED THE TWO SMOKELESS FUEL CHEEKS CAN BE ADDED (ONE EACH SIDE OF THE GRATE) AS PICTURED BELOW IN THE BOTTOM PHOTOS.

